

# Bucket Descaler

Patent Pending

## VALVE KIT INSTALLATION INSTRUCTIONS

- 1 Disconnect power to unit before servicing



- 2 Remove black plugs from the openings marked "Chemical Valve" and "Chemical In" on bucket lid by pushing on bottom of plug and prying from above.




- 3 Detach black inlet strainer by cutting the clamp in place and removing the strainer from inlet tube. Press tube onto center barb of flow control valve; fasten in place with black tie wrap.



4

Loosen set screw in valve handle and remove handle and fastening nut; insert valve in opening marked “Chemical Valve” from the underside of the lid as shown and replace fastening nut to secure onto lid. Replace valve handle and tighten set screw to secure handle to valve.

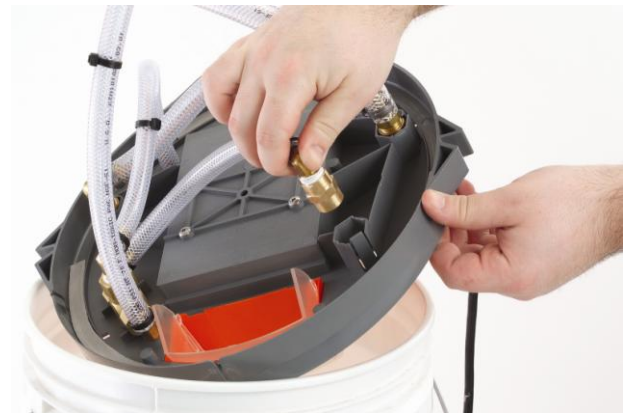

5

Remove male garden hose connector from valve assembly and insert female fitting into the opening marked “Chemical In” from the underside of the lid.



6

Thread male garden hose connector into opening marked “Chemical In” and tighten using two wrenches—one on the fitting and the other on the brass elbow on the underside of the lid.